

OWNER'S MANUAL

Cane Sculpt Armchair

Natural cane, exposed Sheesham and a removable cushioned seat give Cane Sculpt its light, open character. Simple care helps preserve the wood finish, woven back and upholstery.



White upholstery shown

Product at a glance

OVERALL SIZE 23 in W x 28.25 in D x 30.5 in H 58.4 x 71.8 x 77.5 cm	SEAT 20 in W x 21.75 in D 18 in high / 45.7 cm high
CONSTRUCTION Solid Sheesham wood frame Natural cane webbing back Furniture-grade plywood support	UPHOLSTERY ROCO-approved linen-blend fabric Alternates as confirmed with order
CUSHIONING Molty High-Density 4 in Foam Polyester wrap; removable seat cushion	FINISH & ASSEMBLY Matte Black standard wood finish Assembly required

Before first use

- Remove packaging carefully. Keep blades and sharp tools away from the upholstery, cane webbing and finished wood.
- Complete assembly before use, following the supplied instructions. Use only the supplied or ROCO-approved hardware and confirm all joints are secure.
- Place the chair on a dry, level indoor surface. Check that it sits evenly and feels stable before sitting.

Everyday use

- Use as a single-person seat. Do not stand, jump, sit on the arms or place concentrated pressure against the cane back.
- Move with two people, lifting from the lower wooden frame. Never drag the chair or lift it by the cane panel or removable cushion.

CARE & MAINTENANCE

Care for wood, cane and upholstery

The standard Cane Sculpt uses linen-blend upholstery, natural cane webbing and a finished Sheesham frame. Alternate upholstery or finishes may have different care requirements; follow the guidance confirmed with your order.

Linen blend

Vacuum gently with a clean upholstery attachment. Keep the fabric away from prolonged direct sunlight to reduce uneven fading.

Natural cane

Dust with a soft brush or dry cloth. Do not soak, steam, scrub aggressively or press heavily on the woven back.

Wood frame

Dust the Sheesham frame with a soft, dry cloth. For light marks, use a barely damp cloth and dry immediately. Avoid unapproved polish, oil or abrasive cleaner.

Cushioning

Natural settling, light body impressions and gradual softening can develop with normal use. Avoid standing, kneeling or placing concentrated weight on the seat.

Spills & cleaning

Blot spills promptly with a clean, colourfast absorbent cloth. Do not rub, scrub or saturate. Avoid bleach, acetone, thinner, excessive water and unapproved steam cleaning.

Movement

Lift from the lower wooden frame when moving the chair. Do not drag it across the floor or pull it by the arms, cane back or seat cushion.

PLACEMENT & SUPPORT

Use it well. We will stand behind it.

The Cane Sculpt is intended for indoor residential use in a dry, well-ventilated setting.

Important precautions

- Keep the chair away from damp walls, water sources, heaters, open flames and prolonged direct sunlight.
- Do not allow children to climb or play on the arms or back. Keep pets, sharp objects and snagging items away from the upholstery and cane weave.
- Do not drill, dismantle, reupholster, replace the cane panel or arrange structural repair without written guidance from ROCO.
- If the chair becomes unstable, develops unusual movement or persistent structural noise, or the cane panel is damaged, stop using it and contact ROCO for assessment.

Warranty guidance

Your Cane Sculpt is supported by the ROCO Confidence Warranty and the product-specific terms confirmed on your product page, quotation, invoice or written order confirmation. Coverage is component-specific. Qualifying solid-wood frame and joinery may receive up to 24 months; plywood support and Molty foam up to 12 months; upholstery workmanship up to 12 months; and ROCO-supplied upholstery material or indoor wood finish up to 6 months, subject to the final order specification. Natural cane is assessed according to the product-specific terms confirmed with your order.

ROCO normally begins with assessment, adjustment, repair or replacement of the affected component. Normal wear, gradual foam softening, fading, stains, natural wood or cane variation, moisture damage, accidental damage, misuse and unauthorised repair are not normally manufacturing defects. Report visible delivery concerns within 48 hours; report installation, alignment or missing-fitting concerns within 7 days; and do not return or repair the chair before receiving instructions from ROCO.

ROCO CUSTOMER CARE

Need assistance?

Contact us early if something does not look, feel or perform as expected. Clear information helps us assess the concern more quickly.

When to contact us

- Report visible transit damage, a wrong item or a major visible delivery concern within 48 hours of delivery.
- Report missing hardware, installation, alignment or missing-fitting concerns within 7 days.
- Stop using the chair and contact ROCO if it becomes unstable, develops unusual movement or persistent structural noise, or if the cane back is damaged.
- Report a hidden manufacturing, material or workmanship concern during the warranty period applicable to your order.

What to share

Please share your order or invoice number, the product name, clear photographs of the complete chair and the affected area, and a short video if the concern involves movement or noise. For assembly concerns, include a clear photo of the relevant hardware or joint.

WHATSAPP	+92 317 6965610
EMAIL	info@roco.pk
AFTER-SALES	roco.pk/after-sales-request/
WARRANTY	roco.pk/warranty-policy/

Version 1.0 | October 2026 | Keep this manual with your order record.