

OWNER'S MANUAL

Fiora Mid-Century Armchair

Exposed timber, open arms and relaxed cushioning give Fiora its mid-century character. Simple care helps preserve the wood finish, upholstery and support.



Dark Brown upholstery shown

Product at a glance

OVERALL SIZE 28 in W x 33 in D x 29.5 in H 71 x 84 x 75 cm	SEAT 22 in W x 21.3 in D 16.5 in high / 42 cm high
CONSTRUCTION Solid Sheesham wood frame Furniture-grade plywood support	UPHOLSTERY Premium ROCO-approved leatherette Alternates as confirmed with order
CUSHIONING Molty High-Density 4 in Foam Polyester wrap	WOOD FINISH Walnut brown standard Selected ROCO tones available

Before first use

- Remove packaging carefully. Keep blades and sharp tools away from the upholstery and finished wood.
- Place the chair on a dry, level indoor surface and check the full access path before moving it into position.
- After transit, allow the cushioning to settle. Check that the chair sits evenly and feels stable before use.

Everyday use

- Use as a single-person seat. Do not stand, jump or place concentrated weight on the arms or back.
- Move with two people, lifting from the lower frame. Never drag the chair or pull it by the arms or cushions.

CARE & MAINTENANCE

Care for wood and upholstery

The standard Fiora uses leatherette and a polished Sheesham frame. Alternate upholstery may have different care requirements; follow the guidance confirmed with your order.

Leatherette

Dust gently with a soft, dry cloth. For light marks, use a clean barely damp cloth and dry the surface promptly. Avoid oils, waxes and harsh chemicals.

Wood frame

Dust the Sheesham frame with a soft, dry cloth. Use a barely damp cloth for light marks and dry immediately. Do not use unapproved polish, oil or abrasive cleaner.

Cushioning

Natural settling, light body impressions and gradual softening can develop with normal use. Avoid standing, kneeling or placing concentrated weight on the seat.

Spills & cleaning

Blot spills promptly with a clean, colourfast absorbent cloth. Do not rub, scrub or saturate. Avoid bleach, acetone, thinner, excessive water and unapproved steam cleaning.

Movement

Lift from the lower wooden frame when moving the chair. Do not drag it across the floor or pull it by the arms, back cushion or seat cushion.

PLACEMENT & SUPPORT

Use it well. We will stand behind it.

The Fiora is intended for indoor residential use in a dry, well-ventilated setting.

Important precautions

- Keep the chair away from damp walls, water sources, heaters, open flames and prolonged direct sunlight.
- Do not allow children to climb or play on the arms or back. Keep pets and sharp objects away from the upholstery and wood finish.
- Do not drill, dismantle, reupholster or arrange structural repair without written guidance from ROCO.
- If the chair becomes unstable, develops unusual movement or makes persistent structural noise, stop using it and contact ROCO for assessment.

Warranty guidance

Your Fiora is supported by the ROCO Confidence Warranty and the product-specific terms confirmed on your product page, quotation, invoice or written order confirmation. Coverage is component-specific. Qualifying solid-wood frame and joinery may receive up to 24 months; plywood support and Molty foam up to 12 months; upholstery workmanship up to 12 months; and ROCO-supplied upholstery material or indoor wood finish up to 6 months, subject to the final order specification.

ROCO normally begins with assessment, adjustment, repair or replacement of the affected component. Normal wear, gradual foam softening, fading, stains, natural wood or upholstery variation, moisture damage, accidental damage, misuse and unauthorised repair are not normally manufacturing defects. Report visible delivery concerns within 48 hours and do not return or repair the chair before receiving instructions from ROCO.

ROCO CUSTOMER CARE

Need assistance?

Contact us early if something does not look, feel or perform as expected. Clear information helps us assess the concern more quickly.

When to contact us

- Report visible transit damage, a wrong item or a major visible delivery concern within 48 hours of delivery.
- Stop using the chair and contact ROCO if it becomes unstable or develops unusual movement or persistent structural noise.
- Report a hidden manufacturing, material or workmanship concern during the warranty period applicable to your order.

What to share

Please share your order or invoice number, the product name, clear photographs of the complete chair and the affected area, and a short video if the concern involves movement or noise.

WHATSAPP	+92 317 6965610
EMAIL	info@roco.pk
AFTER-SALES	roco.pk/after-sales-request/
WARRANTY	roco.pk/warranty-policy/

Version 1.0 | October 2026 | Keep this manual with your order record.