

OWNER'S MANUAL

Varden Lounge Armchair

Designed for relaxed, everyday comfort. Regular care helps preserve the Varden's upholstery, support and finish.

Product at a glance

OVERALL SIZE 80 cm W x 76 cm D x 78 cm H 31.5 in W x 29.9 in D x 30.7 in H	SEAT 40 cm W x 54 cm D; 42 cm high 15.7 in W x 21.3 in D; 16.5 in high
SKU VLA-431	ASSEMBLY Leg fitting required before use
COMFORT Supportive foam-padded seat and back	UPHOLSTERY ROCO-approved leatherette

Before first use

- Remove packaging carefully. Keep blades and sharp tools away from the upholstery.
- Fit the supplied legs securely with the provided hardware, then place the chair on a dry, level surface and confirm access before moving it into position.

Everyday use

- Use as a single-person seat. Do not stand, jump or place weight on the arms or back.
- Move with two people, lifting beneath the lower frame. Never drag or lift by the arms.

CARE & MAINTENANCE

Simple care for lasting comfort

Varden is supplied in leatherette as standard. If your order uses another upholstery, follow the material-specific care guidance confirmed with your order.

Seat cushion

Allow light settling with use. Avoid leaving heavy objects on the seat when the chair is not in use.

Leatherette

Wipe with a soft, dry or lightly damp cloth. Keep the surface away from prolonged direct sunlight and strong heat.

Spills

Blot promptly with a clean, colourfast cloth. Do not rub, scrub or soak the upholstery.

Cleaning

Do not use bleach, acetone, thinner, abrasives, harsh chemicals or steam cleaning. Contact ROCO if you are unsure how to treat a mark.

Metal legs

Dust with a soft, dry cloth. Wipe light marks with a barely damp cloth and dry immediately. Check the supplied leg fixings periodically.

PLACEMENT & SUPPORT

Use it well. We will stand behind it.

The Varden is intended for indoor residential use in a dry, well-ventilated setting.

Important precautions

- Keep away from damp walls, water sources, heaters, open flames and prolonged direct sunlight.
- Do not allow climbing on the arms or back. Keep pets and sharp objects away from the upholstery.
- Do not drill, dismantle, reupholster or arrange structural repair without ROCO guidance.
- If a leg loosens, the chair becomes unstable or persistent structural noise develops, stop using it and contact ROCO.

Warranty guidance

Your chair is supported by ROCO's current warranty terms and any product-specific terms confirmed on the product page, quotation, invoice or written order confirmation. Coverage is component-specific and applies to eligible manufacturing, material or workmanship defects. ROCO normally begins with assessment and repair of the affected component.

Normal wear, gradual foam softening, fading, stains, moisture damage, misuse and unauthorised repair or modification are not normally manufacturing defects. Report visible delivery concerns within 48 hours and contact ROCO before arranging repair or return.

ROCO CUSTOMER CARE

Need assistance?

Contact us early if something does not look, feel or perform as expected. Clear information helps us assess the concern more quickly.

When to contact us

- Report visible transit damage, a wrong item or a major delivery concern within 48 hours.
- Report missing fittings or an assembly/alignment concern within 7 days where applicable.
- Stop using the chair if it becomes unstable or a leg loosens repeatedly. Report hidden manufacturing, material or workmanship concerns during the applicable warranty period.

What to share

Share your order or invoice number, product name, clear photos of the chair and affected area, and a short video if the concern involves movement or noise.

WHATSAPP	+92 317 6965610
EMAIL	info@roco.pk
AFTER-SALES	roco.pk/after-sales-request/
WARRANTY	roco.pk/warranty-policy/

Version 1.0 | September 2026 | Keep this manual with your order record.