

OWNER'S MANUAL

Kade Outdoor Sectional Sofa Set

SKU KOSS-463

Open steel framing, solid teak surfaces and cushioned seating give Kade its easy outdoor character. Regular, gentle care will help keep the set comfortable and well presented.

Product at a glance

2-SEAT MODULE 68.9 in W x 30.7 in D x 27.6 in H 175 x 78 x 70 cm	MATCHING TABLE 27.6 in W x 13.8 in D x 16.1 in H 70 x 35 x 41 cm
SEATING 4 persons	SET CONFIGURATION 2 seating modules + 1 table
ASSEMBLY Delivered as completed modules	CONSTRUCTION Powder-coated steel with solid teak surfaces

Before first use

- Remove packaging carefully. Keep blades and sharp tools away from the upholstery, teak and powder-coated frame.
- Place each piece on a stable, level surface with reasonable drainage. Avoid positions where water can collect beneath the frame or table.
- After transit, allow the Molty foam seat cushions and loose back cushions to settle naturally before final positioning.

Everyday use

- Use the intended seating surfaces only. Do not sit or stand on the teak end platforms or matching table.
- Move the modules and table separately with adequate help, lifting from the steel structure rather than dragging across the floor.

CARE & MAINTENANCE

Care that suits the materials

Fabric and finish can vary with the options confirmed for your order. Use gentle methods and contact ROCO before applying an unfamiliar cleaner, oil or coating.

Seat cushions	Keep the seat cushions clean and dry during extended periods of non-use. Some natural softening and light impressions are expected with regular use.
Back cushions	Re-shape the loose back cushions by hand when needed and store them dry during prolonged wet weather or long periods of non-use.
Upholstery	Brush or vacuum gently using a clean upholstery attachment. Where practical, limit prolonged harsh sun and trapped moisture.
Spills	Blot promptly with a clean, colourfast absorbent cloth. Work from the outside inward and avoid rubbing or saturating the fabric.
Teak surfaces	Wipe dust with a soft cloth. For light marks, use a barely damp cloth and dry promptly. Do not leave standing water on the slats or apply oil without checking with ROCO.
Steel frame	Wipe with a soft damp cloth and dry after cleaning. Keep water from collecting around joints and contact ROCO if the powder-coated finish is chipped or damaged.
Table & platforms	Wipe spills quickly, use coasters where practical and avoid placing very hot items directly on the teak surfaces.

PLACEMENT & SUPPORT

Place it well. Keep it protected.

Kade is intended for residential outdoor seating. A stable, reasonably sheltered setting will help preserve the upholstery, teak surfaces and powder-coated frame over time.

Important precautions

- Keep the set on level flooring with drainage and do not allow standing water to remain around the feet, table or teak surfaces.
- Keep away from open flames, excessive heat, sharp objects and harsh chemicals. Do not allow climbing on the back frames or table.
- During heavy rain or extended non-use, shelter the set where practical and store cushions dry. Do not cover the furniture while it is still wet.
- Do not drill, dismantle, reupholster or arrange structural repair without written guidance from ROCO.
- If a module or table becomes unstable, develops unusual movement or persistent structural noise, stop using it and contact ROCO.

Warranty guidance

The Kade is supported by the ROCO Confidence Warranty and the written terms confirmed with your order. Eligible outdoor principal frame and joinery normally carry 12 months of coverage; eligible outdoor cushions and covers, applied finish and hardware normally carry 6 months against verified manufacturing, material or workmanship defects.

ROCO normally begins with assessment and, where appropriate, repair or replacement of the affected component. Normal wear, gradual cushion softening, fading or weathering, stains, moisture damage, misuse, improper cleaning and unauthorised repair or modification are not normally manufacturing defects.

ROCO CUSTOMER CARE

Need help with your Kade?

Contact ROCO early if something does not look, feel or perform as expected. Clear photos and order details help us assess the concern more efficiently.

When to contact us

- Report visible transit damage, a wrong item or a major visible delivery concern within 48 hours of delivery.
- Stop using a module or the table and contact ROCO if it becomes unstable or develops unusual movement or persistent structural noise.
- Report a hidden manufacturing, material or workmanship concern during the warranty period applicable to your order.

What to share

Please share your order or invoice number, the product name, clear photographs of the complete set and the affected area, and a short video if the concern involves movement or noise.

WHATSAPP	+92 317 6965610
EMAIL	info@roco.pk
AFTER-SALES	roco.pk/after-sales-request/
WARRANTY	roco.pk/warranty-policy/

Version 1.0 | September 2026 | Keep this manual with your order record.