

OWNER'S MANUAL

Nookline Outdoor Sectional Sofa

Designed for relaxed six-person outdoor lounging. Regular care will help preserve Nookline's solid Teak structure, Molty foam cushioning, upholstery and adjustable lounge function.

Product at a glance

SOFA SECTION 96.5 in W x 27.6 in D x 32.3 in H 245 x 70 x 82 cm	SEATING CAPACITY Up to 6 persons 2 modular 3-seat sofa sections
SEATING Seat depth: 20.9 in / 53 cm Seat height: 14.6 in / 37 cm	CUSHIONING Molty foam with fibre wrap Seat cushion: 4.7 in / 12 cm
CONSTRUCTION Solid Teak wood structure Removable outdoor-fabric covers	SET / ASSEMBLY 2 modular sofa sections Fully assembled SKU: NOSS-465

Before first use

- Remove packaging carefully. Keep sharp tools away from upholstery, finished wood and the adjustable lounge mechanism.
- Place each module on a dry, level surface. Check gates, lifts, stairways and passage widths before delivery or repositioning.
- Let loose cushions settle after transit, then shape them gently by hand.

Everyday use

- Use the sofa only for seated or reclined use. Do not stand, jump or place concentrated weight on the backrests, cushions or Teak side ledges.
- Lift modules when moving them; never drag. Adjust the lounge end only when no one is seated on it.

CARE & MAINTENANCE

Simple care for outdoor comfort

Nookline combines solid Teak, loose Molty foam cushioning, outdoor upholstery and an adjustable lounge section. Gentle, regular care is preferable to aggressive cleaning.

Teak structure

Dust with a soft cloth. For light marks, use a slightly damp cloth and dry promptly. Wipe away standing water and avoid abrasive pads or harsh chemicals.

Loose cushions

Plump and rotate cushions regularly. Natural settling and gradual softening can occur with use. Store cushions clean and dry during heavy rain or extended periods of non-use.

Upholstery & spills

Vacuum gently with a clean upholstery attachment. Blot spills promptly with a clean, colourfast absorbent cloth. Do not rub, scrub or saturate the fabric.

Lounge mechanism

Keep the adjustable section free of debris. Operate it smoothly and without forcing. If movement becomes stiff, uneven or noisy, stop adjusting it and contact ROCO.

Outdoor placement & storage

Keep the sofa sheltered or covered during prolonged harsh weather. Remove and store cushions clean and dry during heavy rain or extended non-use; never store them while damp.

PLACEMENT & SUPPORT

Use it well. Keep it working smoothly.

Nookline is a modular outdoor sectional sofa. Good placement, dry storage practices and careful use of the adjustable section will help maintain its appearance and function.

Important precautions

- Place modules on a stable, level surface and avoid locations where water regularly pools around the legs or under the frame.
- Keep the sofa away from open flames, high heat and strong chemicals. Do not place hot objects directly on the Teak frame or side ledges.
- Do not allow climbing on backrests or side ledges. Keep sharp objects away from upholstery and moving hardware.
- Do not drill, dismantle, refinish or repair the adjustable mechanism without ROCO guidance. If a module becomes unstable or develops persistent movement, stop using it and contact ROCO.

Warranty guidance

The Nookline Outdoor Sectional Sofa is supported by the ROCO Confidence Warranty and any product- or order-specific written terms. Coverage is component-specific and applies to eligible manufacturing, material or workmanship concerns affecting the structure, cushioning, covers, finish, hardware and functional components under the applicable terms.

ROCO follows a repair-first approach, with assessment, adjustment, repair or affected-part replacement where appropriate. Normal wear, gradual cushion softening, fading, stains, moisture-related damage, unsuitable cleaning, misuse and unauthorised repair are not normally manufacturing defects.

ROCO CUSTOMER CARE

Need assistance?

Contact ROCO early if something does not look, feel or function as expected. Clear information helps us assess the concern more efficiently.

When to contact us

- Report visible transit damage, a wrong component or a major delivery concern within 48 hours.
- Contact ROCO if a module becomes unstable, the adjustable end stops operating smoothly, or persistent structural movement develops.
- Report hidden manufacturing, material or workmanship concerns during the warranty period applicable to your order.
- Do not arrange third-party structural or mechanism repairs before receiving ROCO guidance.

What to share

Please share your order or invoice number, the product name, clear photographs of the complete sofa and affected area, and a short video if the concern involves movement, instability, alignment or mechanism operation.

WHATSAPP	+92 317 6965610
EMAIL	info@roco.pk
AFTER-SALES	roco.pk/after-sales-request/
WARRANTY	roco.pk/warranty-policy/

Version 1.1 | September 2026 | Keep this manual with your order record.